

LENAIR VOYAGER

Reference	Matching units	Air flow in m ³ /h		Pressure drops in Pa		Jet velocity in m/s		Air Throw in m (each side)	
		Mini	Maxi	At mini air flow	At maxi air flow	At mini air flow	At maxi air flow	At mini air flow	At maxi air flow
RTD11-135	BALTIC 030 to 045	6 000	7 500	40	70	4,3	5,3	9	11
RTD11-185	BALTIC 052 & 065	9 500	11 000	90	135	4,7	5,7	13	15
RTD11-275	BALTIC 065 & 075	12 000	15 000	100	160	4,2	5,1	10	15
LARTD30/36	FLEXY 085 to 120	17 000	22 000	130	250	4,6	6,0	15	21

DIMENSIONS

