



USER MANUAL

DHF CS/CF

AIR CONDITIONING UNITS
FOR CLOSE CONTROL APPLICATION



EN
TRANSLATION OF THE ORIGINAL INSTRUCTIONS

HF61GC0303J / 05_23

Dear Customer,

Thanking you for choosing our products, we are pleased to provide you this manual for the correct use of equipment.

Please read carefully the recommendations mentioned in the following pages and instruct your technicians and dedicated personnel who will deal with the management and maintenance of the unit.

Our company will remain at your complete disposal for any questions e/o clarification you should need during the commissioning phases or its life cycle.

Whenever ordinary or extraordinary maintenance is required Service Department will be available to offer a dedicated and customized service and maintenance quotation and spare parts supply.

Please find here attached our direct contacts in case you may need assistance:



LGL FRANCE

6 Rue des Albatros – ZI Les Meurières – BP71

69780 Mions – FRANCE

T. +33 (0) 472 232 020

Each unit has an identification plate that is located on its frame and inside the electrical control panel, which shows all the data necessary for the installation, maintenance and traceability of the machine.

THE LABEL SHOWS THE FOLLOWING DATA:

- Manufacturer/Marketing body
- CE mark, possibly accompanied by a subscript that identifies the certifying body for the Pressure Equipment Directive 2014/68/EU (PED). The number of the certifying body must be indicated for units of a PED category equal to or greater than class 2.
- Series and size of the unit
- Date of manufacture
- Main technical data




Note the model, the serial number, the final refrigerant charge and the machine reference diagrams attached to this manual so that they can be easily found in case of data plate damaging and system maintenance.

 **ATTENTION**

Never remove the label. This shows the serial number of the unit from which it is possible to obtain information about the technical features and the components installed, to then identify the unit correctly.



Modello - Model				
Matricola - Serial number				
Codice identificativo - ID code				
Data di produzione - Date of production				
Categoria PED/ 2014/68/EU - Category PED/ 2014/68/EU				
Procedura di valutazione conformità PED - PED conformity module				
Max pressione ammissibile (PS) lato alta pressione - Max allowable pressure (PS) high pressure side [bar-r]				
Max pressione esercizio (PS) lato bassa pressione - Max allowable pressure (PS) low pressure side [bar-r]				
Max/min temperatura di stoccaggio - Max/min storage temperature [°C]				
Max/min temperatura ambiente di funzionamento - Max/min ambient working temperature [°C]				
Potenza frigorifera* - Cooling capacity* [kW]				
EER*				
Potenza termica* - Heating capacity* [kW]				
COP*				
Refrigerante - Refrigerant [Ashrae 15/1992] / GWP				
Carica refrigerante - Refrigerant charge [kg]	C1	C2	C3	C4
Refrigerante aggiunto - Added refrigerant [kg]	C1	C2	C3	C4
Carica totale refrigerante - Total charge refrigerant [kg]				
CO2 equivalenti - CO2 equivalent [t]				
Taratura pressione lato alta - High pressure switch set [bar-r]				
Taratura pressione lato bassa - Low pressure switch set [bar-r]				
Taratura valvola sicurezza refrigerante lato alta/bassa pressione - Safety valve refrigerant high/low pressure side set [bar-r]				
Massima pressione esercizio circuito acqua - Max working pressure water circuit [bar-r]				
Taratura valvola sicurezza acqua - Safety valve water side set [bar-r]				
Alimentazione elettrica - Power supply				
Potenza massima assorbita - Max absorbed power [kW]				
Corrente massima - Full load ampere FLA [A]				
Corrente di spunto - Starting current LRA [A]				
Schema elettrico - Wiring diagram				
Schema frigorifero - Refrigeration diagram				
Peso a vuoto - Empty weight [kg]				
* EN14511-2				
Contiene gas fluorurati ad effetto serra disciplinati dal protocollo di Kyoto/ Contains fluorinated greenhouse gases governed by the Kyoto protocol Ermeticamente sigillato/Hermetically sealed				

SAFETY SYMBOLS	
 WARNING	With reference to additions or recommendations for the correct use of the unit.
 DANGER	With reference to dangerous situations that may occur with the use of the unit to guarantee personal safety.
 ATTENTION	With reference to dangerous situations that may occur with the use of the unit to prevent damage to property and to the unit itself.

GENERAL CAUTIONARY NOTES

The operating rules contained in this manual are an integral part of the unit supply and are valid exclusively for the units covered by this manual. They contain all the useful and necessary information for safe operation and ideal, recommended use of the unit. The declaration of conformity is attached individually to the literature kept on the machine, usually inside the control cabinet.

Please follow the instructions given below:

- Read carefully the instruction manual which should be considered an integral part of the unit.
- Every operator and the personnel in charge of unit maintenance must read the manual throughout carefully and observe its prescriptions.
- The employer is requested to make sure that the operator has the necessary aptitude requirements for operating the unit and has carefully read the manual.
- The instruction manual must be easily available to the operation and maintenance personnel.
- Keep the manual for the entire working life of the unit.
- Make sure any updates that are received are integrated into the text.
- Hand over the manual to any other user or subsequent owner.
- Use the manual so that the contents are not damaged - entirely or in part.
- Do not remove, tear off or rewrite parts of the manual for any reason.
- Keep the manual with care; it must be available at the unit, stored in a special container, to protect it from moisture and heat, until final scrapping of the machine. The location where the manual is kept must be known to the user of the unit, to the managers, to the persons in charge of transportation, installation, use, maintenance, repairs, and end-of-life dismantling and scrapping. If the manual is lost or partially damaged, so that it is no longer possible to read all of its contents, it is advisable to request a new one from the manufacturer.
- Avoid hasty and incomplete preparation that lead to improvisation and cause many accidents.

Pay close attention to the safety symbols shown in the table on the previous page and to their meaning.

Before starting to work, read through and strictly observe the following suggestions:

- the operator must always have the instruction manual readily available at any time;
- plan each action carefully;
- before beginning to work, make sure that the safety devices work properly and you have no doubts about their operation; otherwise, do not under any circumstances start the unit;
- carefully observe the warnings relating to special hazards contained in this manual;
- preventive and thorough maintenance guarantees constantly high operating safety for the unit. Never delay repairs and always have them carried out solely by qualified personnel; only original spare parts are to be used.

THE MANUFACTURER shall not be liable for any accident to persons or property which may occur due to:

- failure to comply with the instructions in this manual regarding the operation, use and maintenance of the unit;
- violent actions or incorrect manoeuvres when performing maintenance on the unit;
- alterations made to the unit without prior written authorisation from the MANUFACTURER;
- events that are, in any case, unrelated to the normal and correct use of the unit;
- in any case, if the user attributes the incident to a defect in the unit, he must prove that the damage caused was a main and direct consequence of this "defect".

This manual reflects the state of the art at the time of unit sale: The MANUFACTURER reserves the right to update its products and manuals without any obligation to update earlier products and manuals, except in special circumstances. These may not be considered inadequate only because they have been subsequently updated based on new experience.

ATTENTION

- The installer must provide adequate documentation that must comply with EN 378-3 if applicable in the country of installation; otherwise, reference should be made to the local regulations in force.
- When installing or servicing the unit, the rules stipulated in this manual must be complied with together with those on board the unit and in any case all necessary precautions must be taken.
- The fluids under pressure in the cooling circuit and the presence of electrical components may cause hazardous situations during installation and maintenance work.
- Any action on the unit must be carried out by qualified and authorised personnel. In the event of a fault, do not attempt repairs on your own and do not let unauthorised technicians carry out repairs, or the guarantee will no longer be valid.
- The initial start-up must be carried out exclusively by qualified personnel authorised by the marketing entity (see annex).
- Before performing any work on the unit, ensure it has been disconnected from the power supply.
- For maintenance service or repairs always and exclusively use original spare parts. THE MANUFACTURER declines all responsibility for damages that may occur due to non-compliance with the above.
- The unit is guaranteed according to the contractual agreements entered into upon its sale: however, failure to comply with the rules and instructions contained in this manual and any modification in the unit not previously authorised, will cause an immediate loss of guarantee validity.
- This manual describes the intended use of the unit and provides instructions for its handling, installation, assembly, adjustment and use. It supplies information on the maintenance schedule, how to order spare parts, the presence of residual risks, and staff training. Therefore, before handling, installing, using or carrying out any maintenance on the unit, read the manual very carefully.
- It is important to remember that the use and maintenance manual can never replace adequate user experience. This manual represents a reminder of the main operations to be performed by operators who have received specific training, for example by attending training courses held by the manufacturer, with reference to particular maintenance operations.
- Make sure all the users have thoroughly understood the operating instructions together with the meaning of any symbols on the unit.
- Possible accidents can be avoided by following these technical instructions drafted in accordance with the Machinery Directive 2006/42/EC and subsequent additions.
- In any case, always comply with national safety regulations.
- Do not remove or damage guards, decals, stickers and wording, especially any that are required by law.
- Adhesive labels intended for safer use are applied to the unit, therefore, it is very important to replace them if they become illegible.

WARNING

- The electrical wiring, hydraulic and refrigeration diagrams and the technical data shown in this manual are supplied for guidance only and may be changed without prior notice for the purpose of improving the product range. For detailed information on specific models, refer to the specific documentation attached to the each product.

Any updates or additions to this use and maintenance manual are to be considered an integral part of the manual and may be requested via the contact phone numbers listed in this manual. Contact the MANUFACTURER for additional information and to share any feedback and recommendations aimed at improving the manual.

If the unit is transferred to a new owner, the MANUFACTURER expects you to please notify the address where to send any manual additions for the new user.

TABLE OF CONTENTS

1	SERIES	p. 6	6.1	FEED WATER	p. 23
1.1	SCOPE OF APPLICATION	p. 6	6.2	DRAIN WATER	p. 24
1.2	PRODUCT INFORMATION	p. 6	7	CONTROL AND SAFETY DEVICES	p. 25
1.2.1	Structure	p. 6	7.1	CONTROL DEVICES	p. 25
1.2.2	Cooling circuit	p. 7	7.1.1	Control device settings	p. 25
1.3	MODELS AND VERSIONS	p. 9	7.2	SAFETY DEVICES	p. 25
1.3.1	Main components	p. 10	7.2.1	Flow switch (optional)	p. 25
1.3.2	Operating Diagrams	p. 11	7.2.2	Control device settings	p. 25
2	SAFETY PRESCRIPTIONS	p. 12	8	MAINTENANCE	p. 26
2.1	GENERAL SAFETY RULES	p. 12	8.1	WARNINGS	p. 26
2.1.1	Thoroughly know the unit	p. 12	8.2	MAIN FEATURES	p. 27
2.1.2	Wear protective clothing	p. 12	8.3	AIR FILTERS INSPECTION	p. 29
2.1.3	Use safety equipment	p. 12	8.4	SAFETY VALVE	p. 30
2.1.4	Fire extinguisher and a first aid kit	p. 12	8.5	FANS INSPECTION	p. 31
2.2	GENERAL PRECAUTIONS	p. 12	8.6	SET THE RIGHT FAN SPEED	p. 32
2.2.1	Safety information	p. 13	9	TROUBLESHOOTING	p. 33
2.2.2	Accident prevention	p. 13	10	RETIRING THE UNIT	p. 34
2.2.3	Operational safety	p. 13	10.1	WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT MANAGEMENT	p. 34
2.2.4	Residual risk areas	p. 13			
2.3	DESCRIPTION OF THE SAFETY SYMBOLS	p. 15			
2.4	MAINTENANCE PRECAUTIONS	p. 16			
2.4.1	Tools	p. 16			
2.4.2	Personnel	p. 16			
2.4.3	Keep the unit clean	p. 16			
2.4.4	Warning plates	p. 16			
2.4.5	Warnings for inspections and maintenance	p. 16			
2.4.6	Care and maintenance	p. 16			
3	INSPECTION / TRANSPORT / POSITIONING	p. 17			
3.1	TRANSPORT	p. 17			
3.2	INSPECTION	p. 17			
3.3	CONVEYANCE	p. 17			
3.4	UNPACKING	p. 17			
3.5	SITING	p. 17			
3.6	INSTALLATION CLEARANCE REQUIREMENTS	p. 18			
4	PLUMBING AND ELECTRICAL CONNECTIONS	p. 19			
4.1	HYDRAULIC CONNECTIONS	p. 19			
4.1.1	Properties of the feed water	p. 19			
4.2	ELECTRICAL CONNECTIONS	p. 19			
4.2.1	Main features	p. 19			
5	START-UP	p. 21			
5.1	PRELIMINARY CHECKS	p. 21			
5.2	OPERATING LIMITS	p. 21			
5.3	THERMAL CARRYING FLUID	p. 21			
5.4	START-UP	p. 21			
5.5	INSPECTIONS DURING OPERATION	p. 21			
5.6	GROUP STOP	p. 22			
6	HUMIDIFIER	p. 23			

1 SERIES

1.1 Scope of application

DHF CS/CF units are specially designed for technological environments with very high thermal loads such as Data Centers, where high precision in climate control and a 24h/day operation are required.

These combine state-of-the-art technical solutions with innovative aesthetics that allow for visible installation even in environments manned by operators.

WARNING

Regarding the unit setting and its use, it is important to know that:

- All models belonging to the DHF CS/CF series are designed and built for indoor installation:
- the units are designed and built to operate in the temperature ranges indicated in paragraph 5.2 Operating limits p. 21: applications outside the indicated limits may be authorised by the MANUFACTURER, subject to verification and subsequent written authorization.
- the storage temperature of the unit must be within the limits indicated in the paragraph 5.2 Operating limits p. 21;
- ventilation of the unit external finned heat exchanger and the clearance space around it must be guaranteed;
- the installation environment must be immediately suitable from first positioning of the unit and not just after installation completion (for example, do not install and operate the unit in premises and open work sites where completion works might damage the unit);
- the unit must only be used for housing, industrial and technological conditioning; any other use is considered not recommended.
- failure to comply with the aforementioned items and those contained in the manual will cause an immediate loss of guarantee validity; in this case, the manufacturer declines all responsibility for any damage to persons, property or the unit that may derive from it.

DANGER

- Install the unit in environments without any risks of explosion, corrosion or fire.
- Make sure that the unit is supplied an adequate volume of air at both intake and outlet ends.
- Any use that does not conform to the expected conditions could result in serious consequences for the unit.
- All ordinary and extraordinary maintenance operations must be carried out with the unit switched off, by disconnecting the power supply.
- Wait approximately 30 minutes after switching off the unit before carrying out any maintenance operations to avoid burns.

ATTENTION

- Before starting any work on the unit, each operator must be perfectly familiar with its operation and its controls,

and have read and understood all the technical information contained in this manual.

- It is forbidden to use the unit in conditions or for uses other than what is indicated in this manual and the MANUFACTURER may not be held responsible for breakdowns, accidents or injuries due to failure to comply with this prohibition.
- Do not repair high pressure pipes with welds.
- It is forbidden to tamper with, alter or modify, even partially, the systems or equipment described in the instruction manual, and in particular, the guards and warning symbols required for personal safety.
- It is also forbidden to operate in manners different from those indicated or fail to perform operations necessary for safety reasons.
- Safety instructions are particularly important, as well as general information contained in this manual.

1.2 Product information

The DHF CS/CF units, like all our products Lennox, represent the state of the art in terms of technology and aesthetics. Thanks to their characteristics, the DHF CS/CF units can be installed in environments where people work.

The depth of 890 mm of DHF_CS units (960mm for the DHF_CF units) allows compatibility with the standard measures of the electronic devices; in addition, the innovative design and high-tech colors make the DHF CS/CF series the latest generation of IT devices.

The internal design of the units was created primarily by seeking efficiency and reliability, without forgetting accessibility to all components: compressors, fans, valves, etc. are accessible and therefore any maintenance action can be carried out from the front of the unit. Furthermore, the doors can be removed in a few seconds thanks to an innovative hinge system, which facilitates operations in the case of confined spaces.

The use of components from the best brands and an integrated development process (CAD + CAM, CAE) is a guarantee of the highest quality in terms of efficiency, reliability, maintenance times, pre- and post-sales assistance.

All units are available both with a single circuit for a maximum power of 80 kW, and with two circuits for a maximum power of 110 kW.

1.2.1 Structure

DHF CS/CF units are designed with a self supporting frame and all components are produced using sophisticated computer driven machines and special tools. All sheet metals are galvanized and all external panels are powder coated RAL 7016 giving to the units the image and the quality like last generation of IT devices.

WARNING

Units are completely closed and only frontal access is requested.

Anyway it is also possible to have side access in order to reach the steam piping and the drain pan, or simply to substitute a damaged side panel. All this problems are very rare, but with DHF CS/CF units it is possible to solve them.

The shape of the units is characterized with the curved edges with variable radius and gives both a good aesthetic and advantages against injuries.

The special internal design allows the simple dismantling of the upper part of it ensuring an insuperable accessibility to all refrigerating components.

WARNING

All fixing elements are made in stainless steel or in non corroding materials.

The dray pan is made in stainless steel in order to ensure long time operation without damages.

All panels are thermally insulated with a polyurethane foam class 1 according UL 94 norms. This material, thanks to the open cells, gives good performances in sound absorption.

WARNING

As an option, sandwich panels are available.

Mineral fibres are closed between the panel and a second sheet of metal giving the maximum in terms of internal cleaning.

Double skin panels are classified between non flammable materials class A1 according DIN 4102 norms.

The sound insulation is better than the standard solution, but the internal reflected sound power will increase the amount in delivery side (+2dB).

1.2.2 Cooling circuit

The entire refrigerating circuit is assembled in our production line including all pipe work and using only primary brand for components.

The workers involved in the welding and pipe work process are qualified by a third part according 2014/68/EU.

Cooling components:

- Two - three way chilled water valve
- Relief valves

ELECTRIC CONTROL BOARD

The electric control board is constructed and wired in accordance with Directives 2014/35/EU and 2014/30/EU and related standards.

The board may be accessed through a door after the main switch has been turned off.

All the remote controls are implemented with signals at 24 V, powered by an isolation transformer positioned inside the control board.

ATTENTION

The mechanical safety devices such as the high pressure switched are of the kind that trigger directly; their efficiency will not be affected by any faults occurring in the microprocessor control circuit, in compliance with 2014/68/EU.

MICROPROCESSOR CONTROLLER

The microprocessor built into the unit allows the different operating parameters to be controlled from a set of pushbuttons situated on the electric control board:

— Alarm management:

1. Dirty filters alarm.

2. Air flow alarm.

— Alarm signalling;

— Displaying of operating parameters;


— RS232, RS485 serial output management (optional);

WARNING


See microprocessor control manual, enclosed with the unit's documentation, for further details, also in relation to particular customer specifications.

1.2.2.1 Cooling circuits

» **Basic refrigeration circuit**

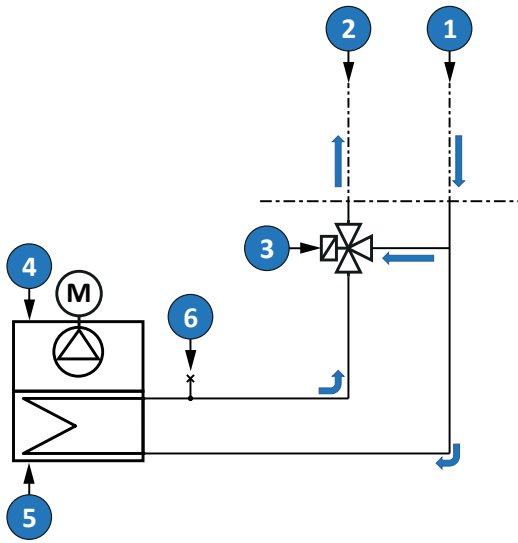

**Standard version
3-way valve**

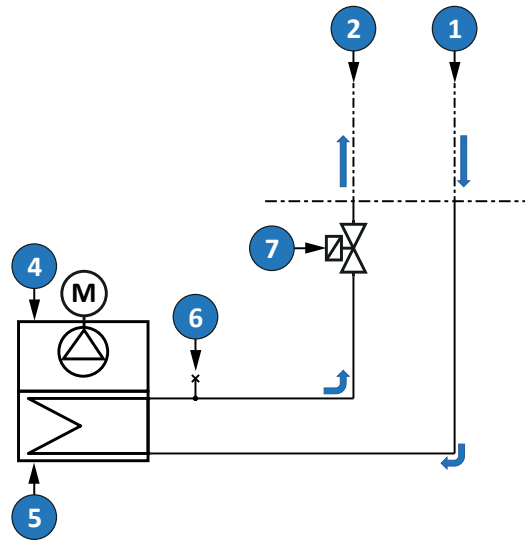


**Optional version
2-way valve**


- 1 Chilled water inlet
- 2 Chilled water outlet
- 3 3 Way valve
- 4 Fan

- 5 Heat exchanger
- 6 Safety valve
- 7 2-way valve (optional)

» **Basic cooling circuit with double feeding (option)**

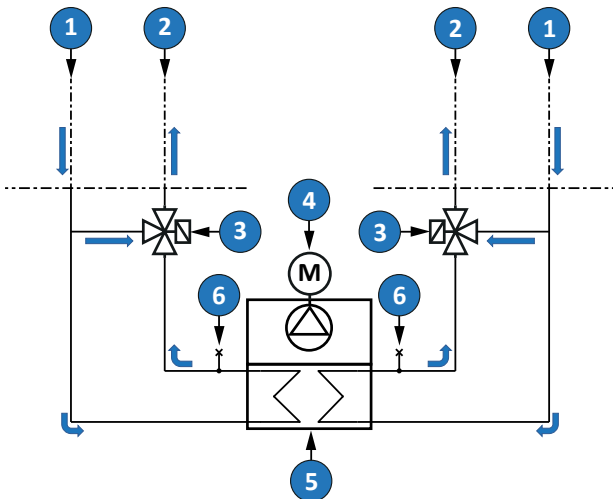

**Standard version
3-way valve**

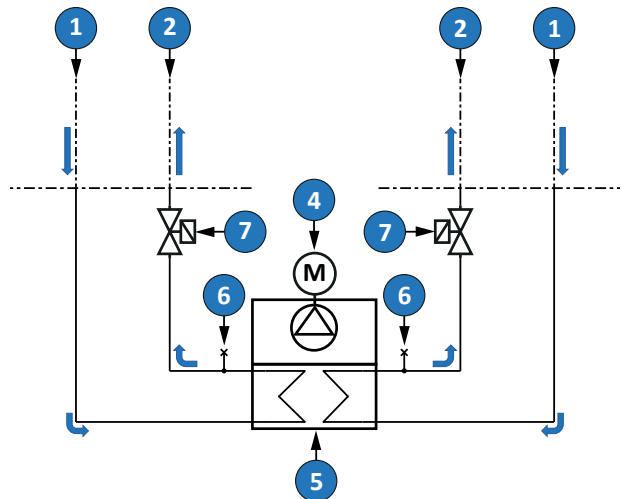

**Optional version
2-way valve**


- 1 Chilled water inlet
- 2 Chilled water outlet
- 3 3 Way valve
- 4 Fan

- 5 Heat exchanger
- 6 Safety valve
- 7 2-way valve (optional)

For different models and configurations see the cooling circuit attached to the unit.

1.3 Models and versions

The naming methods and the unit configuration options are shown below.

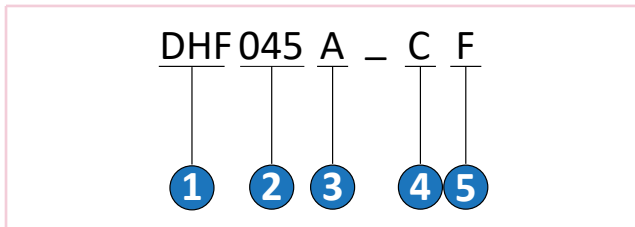

1 - Unit name	
Perimeter closet	DHF
2 - Size	
Nominal Cooling Capacity [kW]	045
	...
	210
3 - Configuration	
Configuration for high water flow rates	A
Configuration for moderate water flow rates	B
Configuration for low water flow rates	C
4 - Esecution	
Chilled water unit	C
5 - Air flow	
Fans module - double coil	F
Fans module	S

1.3.1 Main components

» DHF_CS unit components (free fan unit)



- 1 Chilled water coil
- 2 Condensate drain pan
- 3 Chilled water valve
- 4 Fans module H = 550 mm

- 5 EC Fans
- 6 Electric control board
- 7 Air filter
- 8 Adjustable supports ± 250 mm

» DHF_CF unit components (high efficiency free fan unit)




- 1 Chilled water coil
- 2 Condensate drain pan
- 3 Chilled water valve
- 4 Fans module H = 550 mm

- 5 EC Fans
- 6 Electric control board
- 7 Air filter
- 8 Adjustable supports ± 250 mm


The images shown are for illustrative purposes only. For the correct positioning of the components and accessories, refer to the dimensional drawing attached to the unit.

1.3.2 Operating Diagrams

» Operating Diagrams: Underfloor fans module with front air delivery

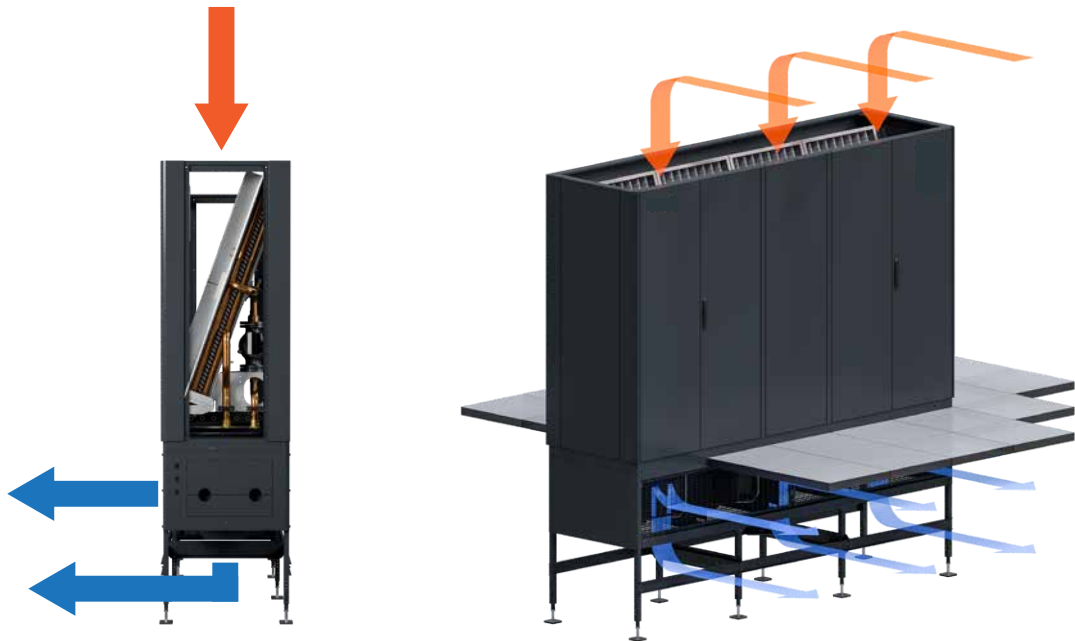

» Operating Diagrams: Underfloor fans module with front and lateral air delivery

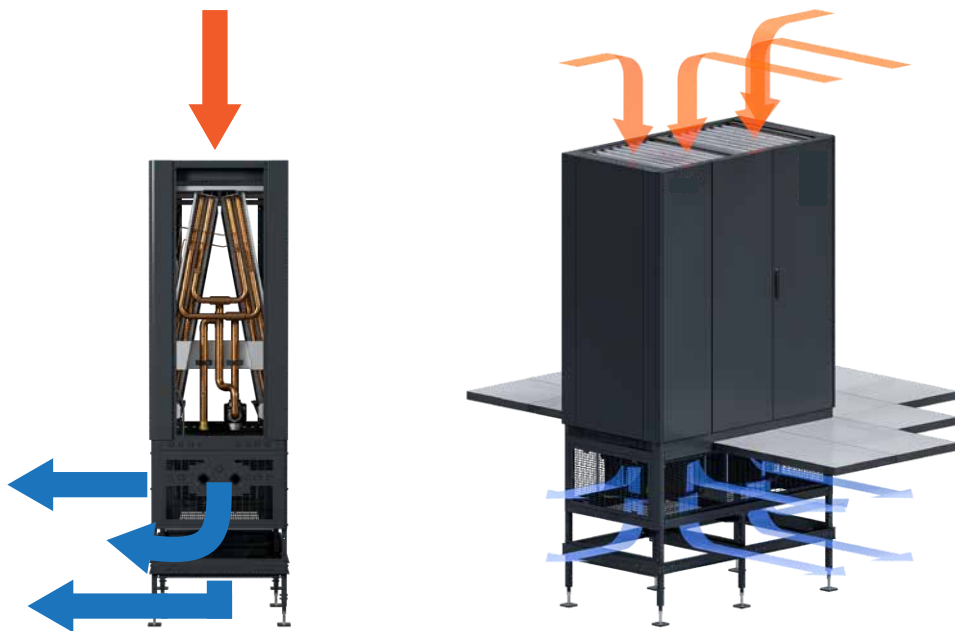

⚠ WARNING

The configurations shown as examples are just some of the configurations available.

2 SAFETY PRESCRIPTIONS

The following are some general rules useful for ensuring the safety of people who are in contact with the unit.

⚠ ATTENTION

It is up to the installer and the owner of the installation site to define the safety and protection devices to be used for unit maintenance operations or in dangerous situations - as well as the emergency procedures to be adopted in the latter case. All this in accordance with current legislation and in conjunction with local rescue units.

2.1 General safety rules

2.1.1 Thoroughly know the unit

The unit must only be used by qualified personnel, who are expected to know the arrangement and function of all controls, instruments, indicators, indicator lights and various data plates.

2.1.2 Wear protective clothing

Each operator must use personal protective equipment such as gloves, headgear, safety goggles, safety shoes, and hearing protection.



2.1.3 Use safety equipment

A first aid kit and a fire extinguisher must be placed near the unit.



2.1.4 Fire extinguisher and a first aid kit

Check the presence and location of the fire extinguisher. Regularly check that the fire extinguishers are charged and their operating instructions are clearly understood. It is required to be aware of where the first aid box is kept. Periodically check that the first aid kit is stocked with disinfectants, bandages, drugs, etc. The personnel must know what to do in the event of a fire. Make sure that emergency help phone numbers are readily available. In the event of a fire, use a fire extinguisher in compliance with the regulations in force. Contact the fire department.

⚠ WARNING

The owner of the building where the unit is installed must provide the required fire extinguisher.

2.2 General precautions

The Machinery Directive 2006/42/EC provides the following definitions (Annex 1.1.1.1):

DANGER ZONE: any area next to and/or inside a machine, where the presence of an exposed person constitutes a risk for the safety and health of said person.

EXPOSED PERSON: any person found entirely or partially within a danger zone.

OPERATOR: the person (or persons) appointed to install, set up, adjust, maintain, clean, repair and transport the machine.

⚠ WARNING

- Before carrying out any operation or maintenance on the unit it is mandatory to read and follow the instructions given in the use and maintenance manual. During the

actual work, it would be too late: any not recommended or wrong operation could then cause serious damage to people or property.

- The employer must inform in detail all operators about the risks of accidents and particularly about risks related to noise, required personal protective devices and general accident prevention rules provided by laws or international standards and national standards in the Country of destination of the unit. All operators must comply with the international accident prevention standards and standards in force in the country of destination of the unit. Please be reminded that the European Union has issued some directives concerning the safety and health of workers, among which the directives 89/391/EEC, 89/686/EEC, 89/654/EEC, 2009/104/EC, 89/656/EEC, 2003/10/EC, 92/58/EEC and 92/57/EEC that each employer has an obligation to observe and to enforce. In the event that the unit is installed outside the European union, always refer to the regulations in force in the country of installation.
- Before starting any work on the unit, each operator must be perfectly familiar with its operation and its controls, and have read and understood all the information contained in this manual.

ATTENTION

It is forbidden to tamper with or replace parts of the unit unless this has been expressly authorised by the MANUFACTURER.

The use of accessories, tools, consumables or spare parts other than those recommended by the MANUFACTURER and/or specified in this manual may be a hazard to operators and/or damage the unit.

Any alteration of the unit not expressly authorised by the MANUFACTURER shall not imply any civil or criminal liability for the manufacturing company.

WARNING

- It is strictly forbidden to remove or tamper with any safety devices.
- Any installation, ordinary and extraordinary maintenance operations must be carried out with the unit stopped and without power supply.
- Once the unit has been cleaned, the operator must check that there are no worn or damaged parts or parts that are not safely fixed, or if this is the case, ask the maintenance staff to fix the problem. Special attention must be paid to the state of repair of the pressurised pipes or other parts exposed to wear. It must also be ensured that there are no leaks of fluid, or other dangerous substances. In these cases, it is forbidden for the operator to restart the unit before the situation has been remedied. If any of these occurrences are detected, the operator, before leaving the unit unattended, must display a warning sign indicating that maintenance is in progress and it is forbidden to start the unit.
- The use of flammable fluids in cleaning operations is prohibited.
- Periodically check the condition of the data plates and arrange, if necessary, for them to be restored.
- The operator work place must be kept clean, tidy and free from any objects that may limit unhindered movement.

- Operators should avoid operating the device from unsafe, uncomfortable positions that may affect their balance.
- Operators must be aware of possible risks of entrapment and entanglement of clothes and/or hair in moving parts; it is recommended to wear caps over long hair.
- Wearing chains, bracelets and rings can also be dangerous.
- The workplace must be adequately lit for the intended operations. Insufficient or excessively bright lighting can imply safety risks.
- The instructions, accident-prevention rules and warnings contained in this manual must be observed at all times.

2.2.1 Safety information

The units have been designed and built according to the current state of the art and the technical rules currently applicable to fluid chillers and heat pumps and/or fluid chillers with free-cooling exchange intended for cooling water or water and anti-freezing agent mixtures, for housing air conditioning and industrial cooling systems. Compliance with the laws, provisions, prescriptions, orders and directives in force for these machines has been ensured.

The materials and the equipment parts used, as well as the production, quality assurance and control processes meet the highest safety and reliability requirements.

By using them for the purposes specified in this user manual, by operating them with the required diligence and performing accurate maintenance and overhauling in a workmanlike manner, consistent performance and functionality and durability can be ensured.

2.2.2 Accident prevention

The MANUFACTURER will not be liable for accidents, during the use of the unit, due to failure by the user to comply with laws, provisions, prescriptions and regulations applicable to fluid chillers and heat pumps and/or fluid chillers with free-cooling exchange system.

2.2.3 Operational safety

The MANUFACTURER will not be responsible in case of malfunctions and damage if the unit:


- it is used for purposes other than those for which it is intended;
- it is not operated and maintained according to the service standards specified further on in this manual;
- it does not regularly and consistently receive maintenance as prescribed or non-original spare parts are used;
- is modified or some components are replaced without the MANUFACTURER's written authorisation, especially when the effectiveness of the safety systems has been altered or minimised on purpose;
- it is used outside the permissible temperature range.

2.2.4 Residual risk areas

DANGER

In some areas of the unit there are some residual risks that could not be eliminated during the design phase nor isolated with guards due to the unit's operating characteristics. Each operator must be aware of the residual risks present in this unit in order to prevent any accidents.

» **Residual risk areas**

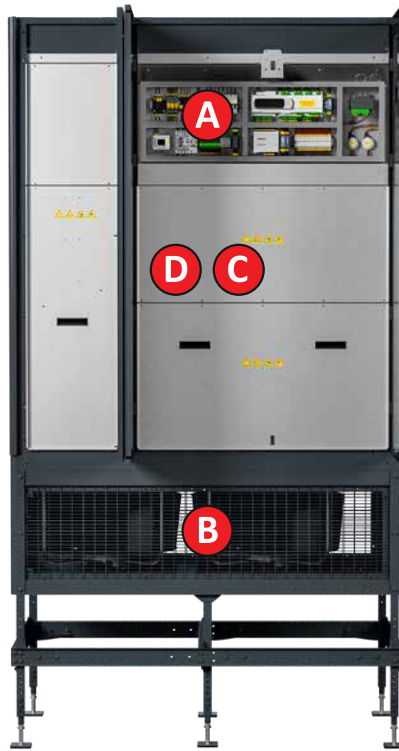

A Danger of fire
B Impact and abrasion hazard in fan area

C Danger of cutting injuries near finned exchangers
D Danger of burns due to the presence of high temperature pipes

WARNING

In order to avoid the risks listed above it is essentially important to:

- set the control panel according to the manufacturer’s instructions;
- to avoid the risk of impact or abrasion in the fan area, cut off the power to the unit before intervening;
- not place metal objects inside the electrical control panel;
- not store flammable materials near the machine;
- not alter any component of the refrigerant circuit;
- not let the machine work outside the limits indicated by the manufacturer;
- dispose of all the materials that make up the machine correctly (see chapter 10 Retiring the unit p. 34);
- not touch the internal components during operation without adequate protection.

2.3 Description of the safety symbols

» Safety symbols



1

- A. Warning: danger due to poor familiarity with all the functions of the unit and the resulting risks.
- B. Read the use and maintenance manual carefully before operating the unit.




2

Electric power supply data plate



3

- A. Danger: hot parts.
- B. Danger: live parts.
- C. Danger of burns.
- D. Danger of cutting injuries in the finned exchangers area.

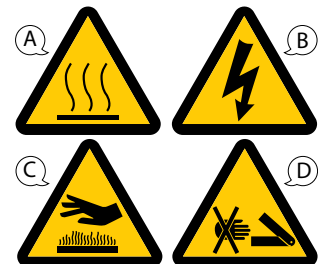

2.4 Maintenance precautions

2.4.1 Tools

Use only tools prescribed by the unit manufacturer. Personal injury is prevented by not using worn or damaged, low quality or makeshift tools. If tools not recommended or modified without authorisation are used, the manufacturer will no longer be liable for damages caused.

2.4.2 Personnel

Ordinary maintenance prescribed in this manual must only be performed by authorised and trained personnel. For the maintenance or overhauling of components not specified in this manual, contact the MANUFACTURER.

2.4.3 Keep the unit clean

Oil and grease stains, misplaced tools or broken pieces are harmful to people as they can cause slipping or falls. Always keep the area where the unit is installed clean and tidy. Do not use diesel fuel, oil or solvents to clean the unit as the first two leave an oily film that makes it easier for dust to stick, while solvents (even milder ones) damage the paint finish and cause rusting. If a water jet hits the inside of electrical equipment, in addition to causing contact oxidation, it may cause the unit malfunction. For this reason, do not use water or steam jets on sensors, connectors or any electrical parts.

2.4.4 Warning plates

Before starting any maintenance operation, turn off the unit. If other people start the unit and operate the control buttons while maintenance operations are being performed, serious injury or even death may result. To avoid these dangers, before carrying out maintenance, hang caution signs around the unit.

2.4.5 Warnings for inspections and maintenance

Display a sign with the warning: "INSPECTION IN PROGRESS" on all sides of the unit. Check the unit carefully following the list of operations contained in this manual.



2.4.6 Care and maintenance

The cause of damages and accidents is often attributable to wrong maintenance, such as:

- no water in the circuit;
- incorrect percentage of anti-freezing agent in the hydraulic circuit;
- poor cleaning in the unit setting;
- circuit inefficiency (damage to the exchangers, pipe connections, tightening of pipes, screws, etc.).

Carry out maintenance work as required: this is also critical for your own safety.

Never postpone scheduled repairs.

Only assign skilled or authorised personnel to repair tasks. Always observe the following safety rules, even when you are thoroughly familiar with the operations involved:

- always keep the unit and the surrounding area clean;
- before beginning to work, check the perfect efficiency of protective devices;
- make sure that no unqualified or not specially appointed persons enter the unit operating area.

3 INSPECTION / TRANSPORT / POSITIONING

The following are recommended and necessary indications to correctly carry out transporting, handling and positioning of the unit. To this end, information is also provided regarding the distribution of weights, anti-vibration devices to be used and clearance space around the unit.

3.1 Transport

While the unit is being unloaded and positioned, utmost care must be taken to avoid abrupt or violent manoeuvres. The unit must be handled carefully and gently; avoid using machine components as anchorages or holds and always keep it in an upright position.

 **ATTENTION**

The unit should be lifted using the pallet it is packed on; a transpallet or similar conveyance means should be used. In all lifting operations make sure that the unit is securely anchored in order to prevent accidental falls or overturning.

3.2 Inspection

Upon receiving the unit, check its integrity: the machine has left the factory in perfect condition; any damage must be immediately reported to the forwarder and noted on the Delivery report before signing it.

The manufacturers or their agents must be informed as soon as possible about the extent of the damage. The Customer must submit a written report for any significant damage.

Check that the following items are present:

- commissioning report
- wiring diagram

Also check the integrity of the documents supplied on-board the machine and attached to this manual.

3.3 Conveyance

During handling, it is mandatory to check the dimensions, weights, centre of gravity and lifting points. Also check that the lifting and positioning equipment complies with the applicable safety regulations.

3.4 Unpacking

 **WARNING**

The unit packaging must be carefully removed avoiding possible damage to the machine.

Different packing materials are used: wood, cardboard, nylon etc. It is recommended to keep them separately and deliver them to suitable waste disposal or recycling facilities in order to minimise their environmental impact.

3.5 Siting

Check the following points to select the best installation setting for the unit and its connections:

- Size and origin of water pipes;
- power supply location;
- accessibility for maintenance or repairs;
- solidity of the supporting surface
- position of any obstacles to air flow;


It is recommended to first prepare the holes in the floor / wall to pass the electric cables and for the air supply (downward air supply). The dimensions of the air outlet and the positions of the holes for anchoring the screws and electrical cables are indicated in the dimensional drawings attached to the unit.

If the unit is to be installed in proximity to private offices or areas where noise levels must be kept down, it is advisable to conduct a thorough analysis of the sound field generated and verify its compatibility with the local laws in force.

3.6 Installation clearance requirements

the appliances and make sure that the air flows are free of obstacles and / or situations that generate recirculation.

The DHF CS/CF conditioner is suitable for any environment as long as it is not aggressive. Avoid placing obstacles near

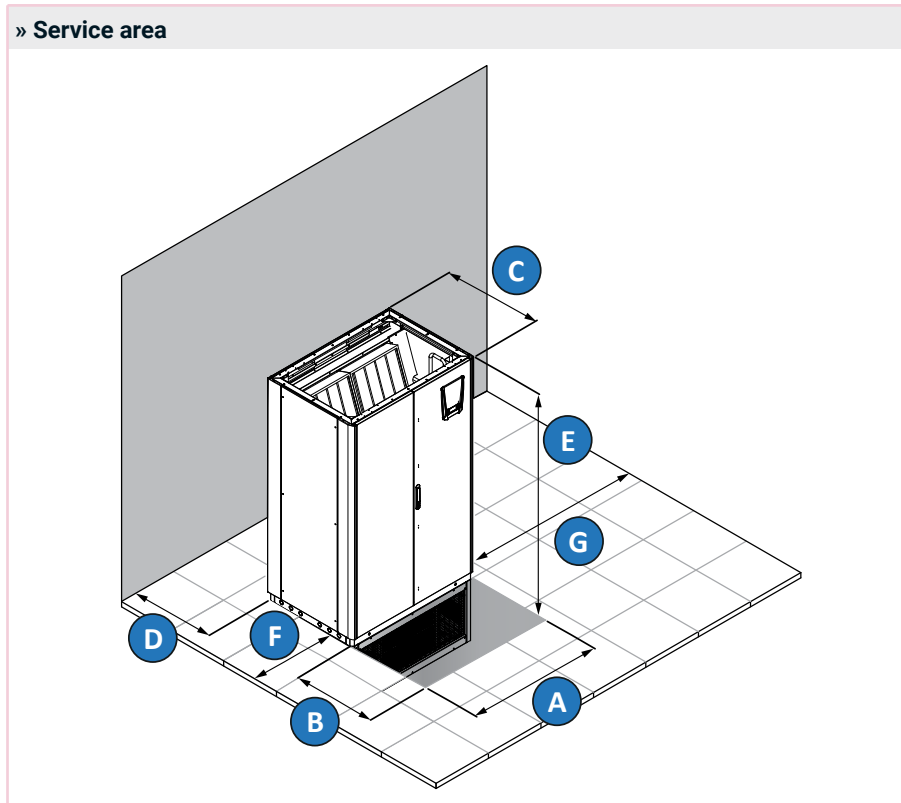

Size	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	F (mm)	G (mm)
045 - 055	1270	750	890 (DHF_CS) 960 (DHF_CF)	10	2000	10	10*
065 - 075	1760	750	890 (DHF_CS) 960 (DHF_CF)	10	2000	10	10*
150 - 180	2510	750	890 (DHF_CS) 960 (DHF_CF)	10	2000	10	10*
200 - 210	3160	750	890 (DHF_CS) 960 (DHF_CF)	10	2000	10	10*

The underfloor fan module has a height of 550 mm.

* For DHF_CF units with standard water connections keep a clearance of 500 mm on the right side to access the water valve. In case of non standard connections, contact the manufacturer for information. For DHF_CS units with pressure independent control valve or energy valve, contact the manufacturer for information on side clearance required to access the water valve.

To ensure correct installation, follow the instructions below:

- Apply a anti-vibration rubber lining between the unit and the bottom;
- Position the unit on the floor/floorstand (base frame).
- Make sure that no obstacles are positioned in front of the module base, to allow routine maintenance of the fans.

In case of installation of the accessories supplied, such as “plenum”, it is necessary to apply a gasket between the unit and the accessory to ensure the seal.

Bear in mind the following aspects when choosing the best site for installing the unit and the relative connections:

- positioning and dimensions of the coupling flanges and refrigerant connections;
- power supply location;
- solidity of the supporting surface;

WARNING

It is recommended to first prepare holes in the floor/wall for passing through the power cables and for the air outlet (down flow units).

The dimensions of the flanges (optional) and of the power cable holes are shown in the unit dimensions attached to the machine documentation.

4 PLUMBING AND ELECTRICAL CONNECTIONS

4.1 Hydraulic connections

4.1.1 Properties of the feed water

The quality and chemical composition of the cooling and heat transfer substance has a great influence on the life of the system, on the heat transfer and therefore on the performance of the air conditioning unit.

Basically, all fluctuating substances in the cooling and heat transfer substance must be avoided since the suspended substance accumulates in the heat exchanger, affecting the heat exchange and the performance of the unit.

Below are the values of the dissolved substances and the water properties recommended.

The information refers to the use of copper exchangers.

If the concentration of some components will be out of range, the customer has to introduce a correction, otherwise the system will be out of warranty.

WATER CONTENT	CONCENTRATION
Alkalinity (HCO ₃ ⁻)	70 - 300 ppm
Sulphate (SO ₄ ²⁻)	< 70 ppm
HCO ₃ ⁻ / SO ₄ ²⁻	> 1.0 ppm
Electrical conductivity	10 - 500 µS/cm
pH*	7.5 - 9.0
Ammonium (NH ₄ ⁺)	< 2 ppm
Chloride (Cl ⁻)	< 30 ppm
Free chlorine (Cl ₂)	< 0.5 ppm
Hydrogen sulphide (H ₂ S)	< 0.05 ppm
Carbon dioxide (CO ₂)	< 5 ppm
Total hardness (°dH)	4.5 - 8.5
Nitrate (NO ₃ ⁻)	< 100 ppm
Iron (Fe)**	< 0.2 ppm
Aluminium (Al)	< 0.2 ppm
Manganese (Mn)**	< 0.05 ppm
Calcium carbonate (CaCO ₃)	< 200 ppm
Phosphate (PO ₄ ³⁻)	< 2 ppm
Ammonia (NH ₃)	< 0.5 ppm
Temperature (°C)	< 65 °C
Oxygen content	< 0.1 ppm

*Generally a low pH value (less than 6) increases the risk of corrosion and a high pH (above 7.5) decreases the risk of corrosion

**Fe³⁺ and Mn⁴⁺ are powerful oxidants and may increase the risk of localized corrosion on stainless steel

4.2 Electrical connections

4.2.1 Main features

ATTENTION

Before carrying out any operation on electrical parts, make sure that there is no applied voltage.

Check that the mains electricity supply is compatible with the specifications (voltage, number of phases, frequency) shown on the unit rating plate.

The power connection for single-phase loads is to be made with a three-pole cable and "N" wire at the centre of the star [optional: power supply w/o neutral].

ATTENTION

The cable section and line protections must accordant with what is indicated in the wiring diagram (attaced to the unit's documentation).

The supply voltage may not undergo fluctuations exceeding ±10% and the unbalance between phases must always be below 2%.

ATTENTION

The unit must operate within the above values, or the warranty will be invalidated.

The electrical connections must be made in accordance with the information shown in the wiring diagram provided with the unit and with current and local regulations.

An earth connection is mandatory. The installer must connect the earthing wire using the earthing terminal situated on the electric control board (yellow and green wire).

The power supply to the control circuit is shunted from the power line through an insulating transformer situated on the electric control board.

The control circuit is protected by suitable fuses or automatic breakers depending on the unit size.

ATTENTION

When the motor runs independently due to air flowing through or if it continues to run down after being turned off, dangerous voltages of over 50V can arise on the motor internal connections through operation of the generator. The absence of voltage must be ascertained by means of a bipolar voltage detector.

⚠ ATTENTION

Even after disconnecting the mains voltage, life-threatening charges can appear between the protective ground "PE" and the mains connection. The protective earth is conducting high discharge currents (dependent on the switching frequency, current source voltage and motor capacity). Earthing in compliance with EN specifications shall therefore be observed even for testing and trial conditions (EN 50 178, Art.5.2.11).

Regarding the differential protection that needs to be installed upstream, it is necessary to use a type A switch that is sensitive to direct currents. It is mandatory for it to have the following features:

1. Adjustable operation threshold
2. Adjustable operation delay

5 START-UP

5.1 Preliminary checks

Check that the electrical connections have been made properly and that all the terminals are securely tightened. This check should also be included in a periodic six-month inspection.

Check that the voltage at the RST terminals is 400 V ± 10% and make sure the yellow indicator light of the phase sequence relay is on (only DX versions). The phase sequence relay is positioned on the electric control board; if the sequence is not duly observed, it will not enable the machine to start.

5.2 Operating limits

Model		DHF_CF/CS
Power supply*		400 (±10%) / 3+N / 50
Storage conditions	Temperature	from -10°C to 60°C
	Humidity max	90%

* For different power supplies, see the attached unit wiring diagram.

5.3 Thermal carrying fluid

The units belonging to the DHF CS/CF series can operate with mixtures of water and up to 50% ethylene glycol.

% by weight of glycol	Freezing temperature of the mixture with ethylene glycol (°C)	Freezing temperature of the mixture with propylene glycol (°C)
0	0	0
10	-3	-3
15	-5	-5
20	-8	-7
25	-11	-10
30	-14	-13
40	-22	-21
50	-34	-33
60	-48	-51

ATTENTION

If there is a need to exceed 50% of glycol, or in any case conditions of use that are not contemplated in the following tables, please contact the technical department for the appropriate checks, otherwise the warranty coverage will be void.

ATTENTION

Using glycol is necessary in all cases in which the temperature of the heat transfer fluid drops below 5°C, i.e. even when the unit is switched off or only running in summer mode, should this temperature condition occur. This will prevent

water freezing and the resulting internal damage to components.

The percentage of glycol must be selected according to the lowest expected temperature.

The use of glycol will determine a change in terms of heating capacity, water flow and pressure drop.

5.4 Start-up

Before starting the unit, turn the main switch on, select the operating mode desired from the control panel and press the "ON" button on the control panel.

If the unit fails to start up, check whether the service thermostat has been set at the rated calibration values.

ATTENTION

You should not disconnect the unit from the power supply during periods when it is idle but only when it is to be taken out of service for a prolonged period (e.g. at the end of the season).

WARNING

In any case, please also refer to the document "First start up instructions", supplied with the unit.

WARNING

It is mandatory to install a metal mesh filter on the inlet pipe with a recommended 1 mm mesh size, to protect the exchanger from residues or impurities in the pipes. If the machine works in combination with process cycles, it is advisable to install an inspectable uncoupling exchanger, in order to avoid possible lockups and/or breaks of the plate heat exchanger. Note that the units are designed to operate in a **closed** hydraulic circuit.

In the case of open tanks, it is advisable to contact the design department which will indicate the best solution to adopt, such as uncoupling the exchanger.

5.5 Inspections during operation

Check the relay on the control board to verify whether the phases occur in the correct sequence: if they do not, disconnect the unit from power supply and reverse two phases of the three-core cable at the unit input. **Never** attempt to modify internal electrical connections: any undue modifications will render the warranty null and void.

5.6 Group stop

The group is stopped by pressing the "OFF" key on the front panel or by acting on the main disconnect, or by acting on the special controls of the LCD user interface.

 **ATTENTION**


It is recommended not to power off the unit via the mains power switch during regular shutdowns, but only in case of expected prolonged idle times (e.g. seasonal stops). The mains switch must be used to cut the unit off from the power supply when there is no current flow, i.e. when the unit is in the OFF state.

Additionally, by completely disconnecting voltage to the unit:

- the only antifreeze protection would be the presence of glycol.

6 HUMIDIFIER

L'installazione di un umidificatore richiede l'allacciamento alle tubazioni d'alimentazione e di drenaggio dell'acqua.

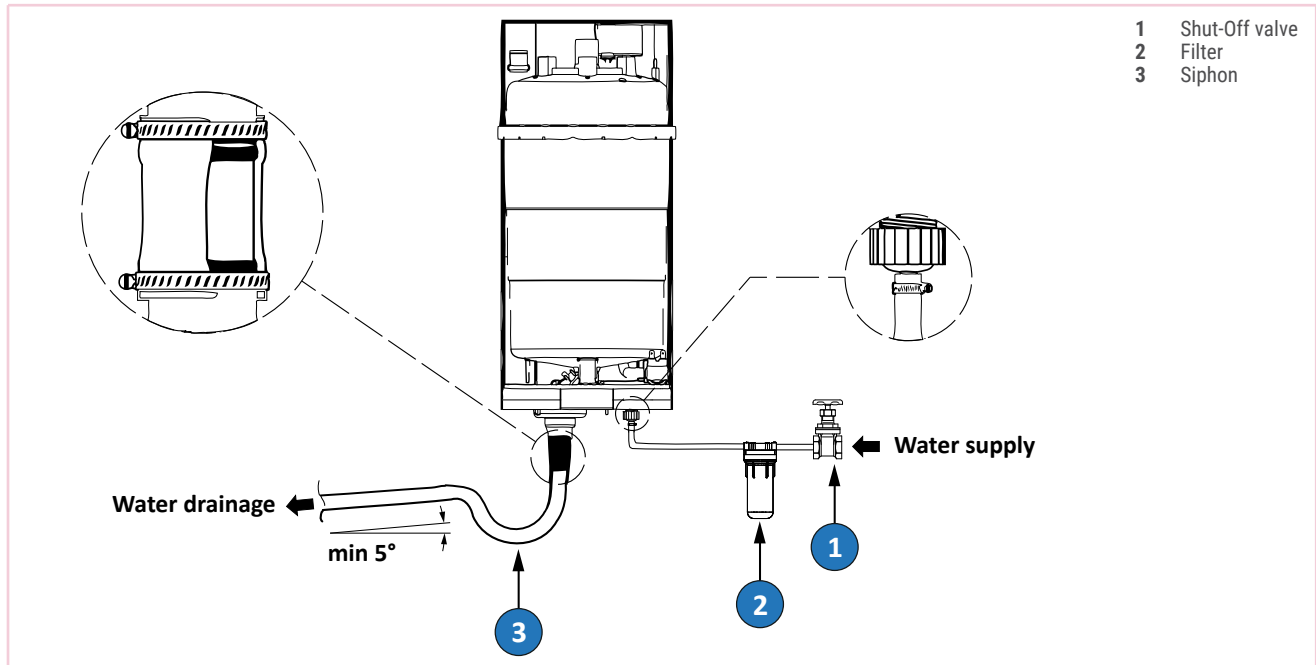

To simplify installation, it is recommended to use flexible pipes with an internal diameter of 6 mm and an external diameter of 8 mm and the 3/4" G straight or 90° swivel fitting.

WARNING

È consigliata l'inserzione di un rubinetto di intercettazione e di un filtro meccanico per trattenere eventuali impurità solide.

The drainage water connection is made by means of rubber or plastic pipe resistant to 100 °C, with a recommended internal diameter of 32 mm.

The drain fitting is suitable for hot blade welding with polypropylene drain pipes.

WARNING

The drain pipe must be free, without back pressure and with a siphon immediately downstream of the connection to the humidifier.

The following conditions satisfy a correct hydraulic connection:

- interruption of the feed water line by means of a valve;
- presence of a mechanical filter on the feed water line;
- water temperature and pressure within the allowed values;
- drainage pipe resistant to a temperature of 100°C;
- minimum internal diameter of the drainage pipe of 25 mm;

- minimum slope of the drainage pipe greater than or equal to 5°;
- electrically non-conductive sleeve;
- presence of a siphon in the drainage pipe.

WARNING

Ad installazione ultimata, spurgare la tubazione d'alimento per circa 30 minuti convogliando l'acqua direttamente nel lo scarico senza introdurla nell'umidificatore. Ciò per eliminare eventuali scorie e sostanze di lavorazione che potrebbero intasare la valvola di carico e provocare schiuma durante l'ebollizione.

6.1 Feed water

The humidifier must be supplied with mains water and with the following characteristics:

- pressure between 0.1 and 0.8 MPa (1-8 bar, 14.5-116 PSI);
- temperature between 1 and 40°C;
- instant flow rate not less than the nominal flow rate of the supply solenoid valve (0.6 l/min);
- The connection is 3/4" G Male type.

» **Limit values for medium-high conductivity feed water of a humidifier with immersed electrodes.**

	Symbol	Unit	Min	Max
Hydrogen ion activity	pH		7	8.5
Specific conductivity at 20°C	$\sigma_R, 20^\circ\text{C}$	$\mu\text{S}/\text{cm}$	350	750
Total dissolved solids	TDS	mg/l	(1)	(1)
Fixed residue at 180°C	R ₁₈₀	mg/l	(1)	(1)
Total hardness	TH	mg/l CaCO ₃	100 ⁽²⁾	400
Temporary hardness		mg/l CaCO ₃	60 ⁽³⁾	300
Fe + Mn		mg/l Fe + Mn	0	0.2
Chlorides		ppm Cl	0	30
Silicon		mg/l SiO ₂	0	20
Residual chlorine		mg/l Cl ⁻	0	0.2
Calcium sulphate		mg/l CaSO ₄	0	100
Metallic impurities		mg/l	0	0
Solvents, thinners, soaps, lubricants		mg/l	0	0

(1) - Values dependent on specific conductivity; generally: TDS \cong 0.93 * σ_{20} ; R₁₈₀ \cong 0.65 * σ_{20}

(2) - Not less than 200% of the chloride content in mg/l di Cl⁻

(3) - Not less than 300% of the chloride content in mg/l di Cl⁻

WARNING

There is no reliable relationship between water hardness and conductivity.

ATTENTION

There is no need to carry out water treatments with softeners! This can cause electrode corrosion and lead to foaming, potentially resulting in uneven service problems.

The following are not recommended:

- the use of well water, industrial water or water drawn from cooling circuits and, in general, potentially polluted water, chemically or bacteriologically;
- the addition of disinfectants or anticorrosive compounds to the water, as they are potentially irritating.

6.2 Drain water

Inside the humidifier, the water is boiled and transformed into steam, without adding any type of substance. Therefore, the drainage water contains the same substances dissolved in the feed water but in greater quantities, depending on the concentration in the feed water and the set drainage cycles and **can reach a temperature of 100°C**. As it is not toxic, it can be drained into the white water collection system. The drain connection has an outside diameter of 32 mm.

7 CONTROL AND SAFETY DEVICES

All control equipment is calibrated and tested at the factory before shipping the machine. However, after the unit has been operating for a reasonable period of time, it is advisable to check the operating and safety devices.

⚠ DANGER

All service operations on the control equipment must be carried out **EXCLUSIVELY BY QUALIFIED PERSONNEL**: incorrect calibration values can cause serious personal injuries and damage the unit.

Many of the operating and calibration parameters of control systems are set by microprocessor control and are password protected.

7.1 Control devices


7.1.1 Control device settings

The calibration values of the control devices set by default for the specific unit are contained in the document "Parameter List", made available to customers by the manufacturer.

7.2 Safety devices

7.2.1 Flow switch (optional)

The paddle flow switch, supplied pre-mounted and wired or separately as part of the equipment, according to the different models, stops the unit in case of excessive reduction of the water flow.

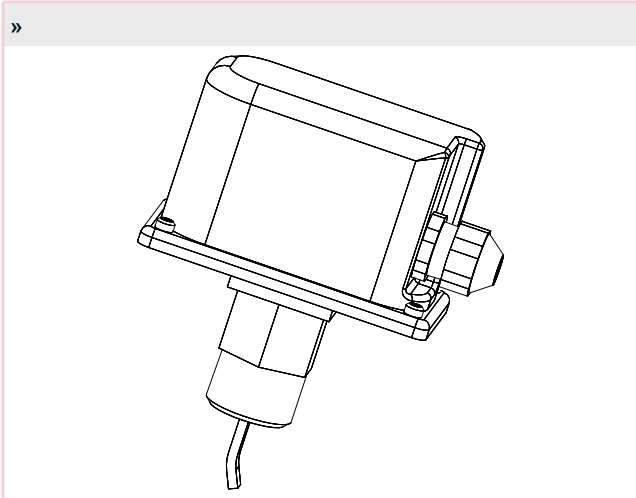

7.2.2 Control device settings

All the control devices are set and tested in the factory before the unit is dispatched. However, after the unit has been in service for a reasonable period of time you can perform a check on the operating and safety devices. The settings are shown in Table "7.1 Setting operating parameters p. 25".

⚠ ATTENTION

All servicing of the equipment is to be considered extraordinary maintenance and may be carried out **BY QUALIFIED TECHNICIANS ONLY**.

⚠ ATTENTION

Incorrect calibration values can cause serious personal injuries and damage the unit.

👉 WARNING

The operating parameters and control system settings configurable by means of the microprocessor control are password protected if they have a potential impact on the integrity of the unit.

» Setting operating parameters

Control device		Set point	Differential
Differential air pressure switch (air flow)	Pa	50	20
Differential air pressure switch (dirty filter)	Pa	350	20

8 MAINTENANCE

ATTENTION

The only operations to be performed by the user are to switch the unit on and off.

All other operations are maintenance tasks and must be performed exclusively by qualified personnel who are able to operate according to the laws and regulations in force.

8.1 Warnings

ATTENTION

When the motor runs independently due to air flowing through or if it continues to run down after being turned off, dangerous voltages of over 50V can arise on the motor internal connections through operation of the generator. The absence of voltage must be ascertained by means of a bipolar voltage detector.

ATTENTION

Even after disconnecting the mains voltage, life-threatening charges can appear between the protective ground "PE" and the mains connection. The protective earth is conducting high discharge currents (dependent on the switching frequency, current source voltage and motor capacity). Earthing in compliance with EN specifications shall therefore be observed even for testing and trial conditions (EN 50 178, Art.5.2.11).

ATTENTION

All the operations described in this chapter **MUST ALWAYS BE PERFORMED BY QUALIFIED PERSONNEL ONLY.**

ATTENTION

Before carrying out any work on the unit or accessing internal parts, make sure you have disconnected it from the mains power supply.

ATTENTION

Be especially careful when working in proximity to finned coils of the units since the 0.11 mm-thick aluminium fins can cause superficial injuries due to cuts.

ATTENTION

After completing maintenance jobs, always replace the panels enclosing the units and secure them with the fastening screws provided.

8.2 Main features

checks as described below. The indications below are related to standard tear and wear.

To guarantee a constantly satisfactory performance over time, it is advisable to carry out routine maintenance and

ACTION		MAINTENANCE FREQUENCY			
		1 month	3 months	6 months	1 year
UNIT	Check that no unusual noise is emitted by the machine and in particular, that there are no vibrations and/or beating.			X	
	Check the efficiency of the differential air pressure switch			X	
FANS Caution: do not access the fan while the fan wheel is in operation	Check for dirt, damage, corrosion, wear and ensure correct fixing.	X			
	Check for any noise of the bearings and the balancing of the shaft.	X			
	Measure current and power consumption.			X	
	Check the electrical connections.		X		
	Clean to preserve smooth functioning.		X		
	Check the correct closing of the electrical box (if available).			X	
AIR FILTERS	Check for dirt, damage, corrosion, and wear.	X			
	Check the filter condition.	X			
	Clean or replace if necessary.			X	
	Perform checks more frequently in dusty environments.	X			
	Check the efficiency of the differential pressure switch for dirty filters.			X	
CONTROL SYSTEM	Check the correct installation and the wiring conditions.	X			
	Check the operation of the LEDs of the display control system and of the alarms.		X		
	Check the connections for electrical and mechanical operation.			X	
	Check the functional elements (e.g. operating controls and display devices).			X	
	Check electrical/electronic and pneumatic input signals (e.g. sensors, remote controllers, control variables) to conform to normal values.			X	
	Check the values in the parameter list (see the Microprocessor Manual).				X
	Adjust the control function and control signals. Check the software cycle running (see the Microprocessor Manual).			X	
SWITCH BOOTH POWER SUPPLY CIRCUITS Caution: the electric cables and electrical components of the air conditioner are live.	Check the power supply in all phases.			X	
	Check the electrical connections and the mechanical function. Restore if not properly tightened.			X	
	Check the power supply of all the terminals.			X	
	Measure power consumption at all connected devices.			X	
	Check, adjust and tighten the functional elements (e.g. operating controls and display devices).			X	
	Check the safety equipment, e.g. thermal switch. Replace every 2 years.				X
	Check the protective covers.				X
	Check the tightening of the electrical terminals both inside the electrical panel and in the compressor terminal blocks. The mobile and fixed contacts of the contactors must be periodically cleaned and, if they show signs of deterioration, they must be replaced.				X


ACTION		MAINTENANCE FREQUENCY			
		1 month	3 months	6 months	1 year
Condensing water (only water condensed units or free-cooling units)	Check the cooling water circuit, check for damage, leaks and ensure correct fixing.	x			
	Check the correct flow of water and clean the water filter.		x		
	Check for internal air: bleed air if present from water circuit.			x	
	Make sure that the system is filled with the prescribed amount of glycol and that there is no ice in the hydraulic circuit.			x	
REFRIGERATION CIRCUIT (only for direct expansion system) Fluoride based refrigerants increase the greenhouse effect and are expected to conform to restrictions and regulations, according to national and European standards.	Measure the pressures and working temperatures (to be performed by a refrigeration technician).			x	
	Check the energy consumption, measure the heat temperature and check for unusual noise during operation.			x	
	Check the operation of all the adjustment devices (power regulators, valves, etc.).	x			
	Check the efficiency of the actuators.				x
	Check the operation of the safety devices.			x	
FINNED PACK EXCHANGERS	Clean the finned pack with compressed air or brushes. If the unit is located in particularly dusty environments, perform the inspections more frequently.			x	
CHILLED WATER CIRCUIT (only chilled water units, dual cooling and free-cooling units)	Check the filling of the hydraulic circuit, by venting it from the valves placed at the highest points.			x	
	Make sure that there are no water leaks.			x	
	Check for any air in the circuit: bleed air from the cooling water circuit using the special valve in the top part of the circuit.			x	
	Check that chilled water supply is guaranteed.			x	
	Check the water temperature and pressure at the inlet and outlet using thermometers and pressure gauges - if installed.			x	
	Check the correct operation of the 2- or 3-way valve.			x	
	Check the efficiency of the actuators.				x
	Make sure that the system is filled with the prescribed amount of glycol and that there is no ice in the hydraulic circuit.			x	
	In the event that there is a water leak and the circuit must be filled, make sure that the glycol concentration is correct.			x	
	Check that the water circulation is as required.			x	
	Clean the external metal filters in the hydraulic lines.			x	
Check the efficient operation of the flow switch or differential pressure switch.			x		
HUMIDIFIER (if present)	Check operation, the absence of significant water leaks, the general conditions of the container. Verify that no arcing or sparking occurs between the electrodes during operation.	x (300 working hours)			
	Check operation, the absence of significant water leaks and replace the cylinder if necessary		x (1000 working hours)		
	Cylinder replacement				x (2500 working hours)

ATTENTION

If the unit is expected not to be in operation for a long time, drain the water from the pipes and the machine, including the water exchanger if it is a Free-Cooling unit (if no glycol-based solutions are used). This operation is mandatory if ambient temperatures are expected to fall below the freezing point of the fluid used, during the unit down time.

8.3 Air filters inspection


» DHF_CS Air filters inspection

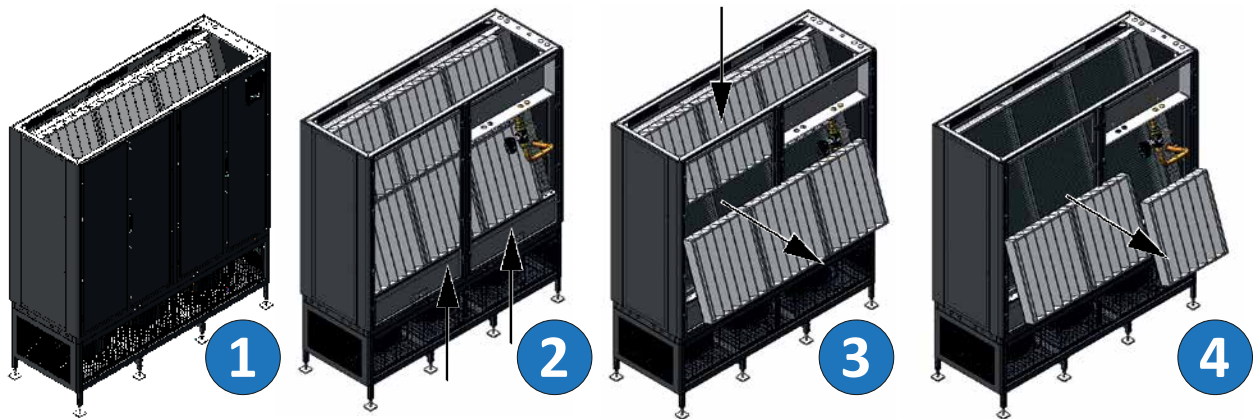

- 1 Open the front panel to access the filter section
- 2 Locate the air filters and remove the two support brackets
- 3 Remove the lower filters, check their condition and replace them if necessary

- 4 Remove the upper filters, check their condition and replace them if necessary

» DHF_CF Air filters inspection

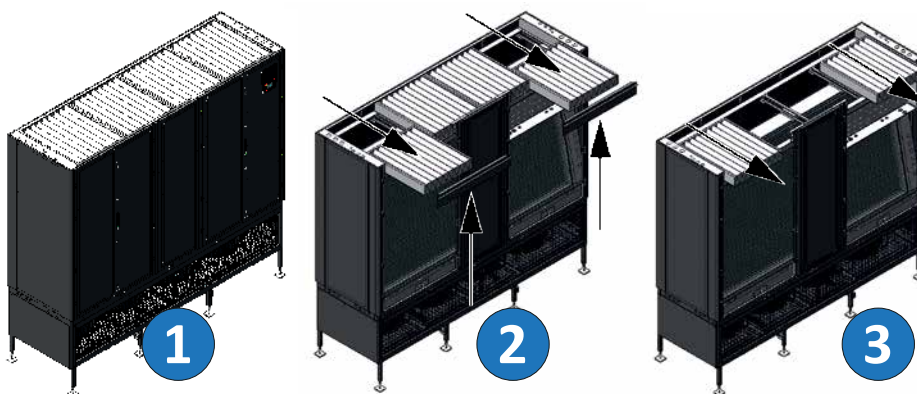


- 1 Open the front panel to access the filter section
- 2 Locate the air filters and remove the fixing bracket

- 3 Remove the filters by sliding the left filter to the opening on the right. Check their condition and replace them if necessary


8.4 Safety valve

» DHF_CS Relief valve

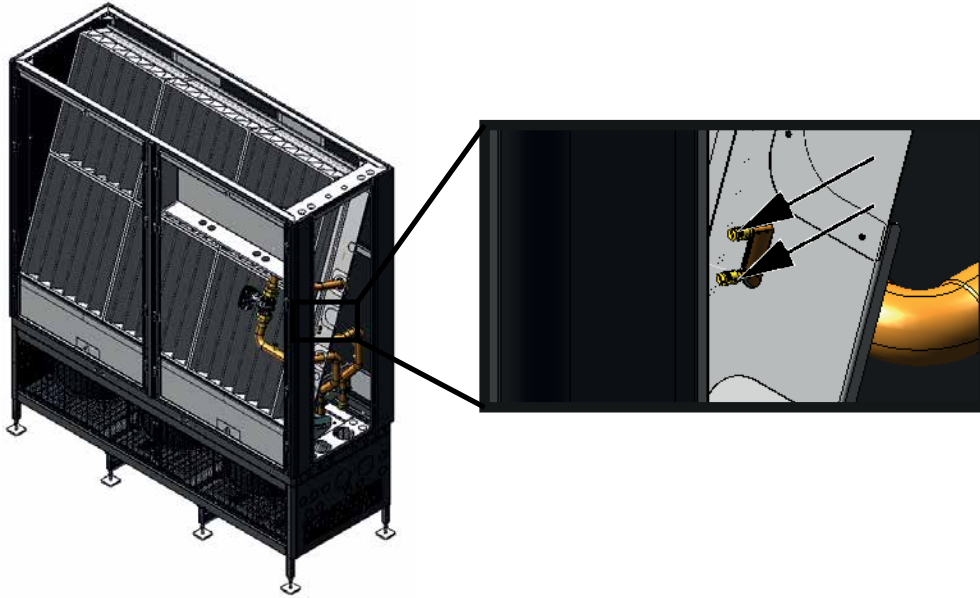

The relief valves are accessible in the units from front of the machines.

» DHF_CF Relief valve

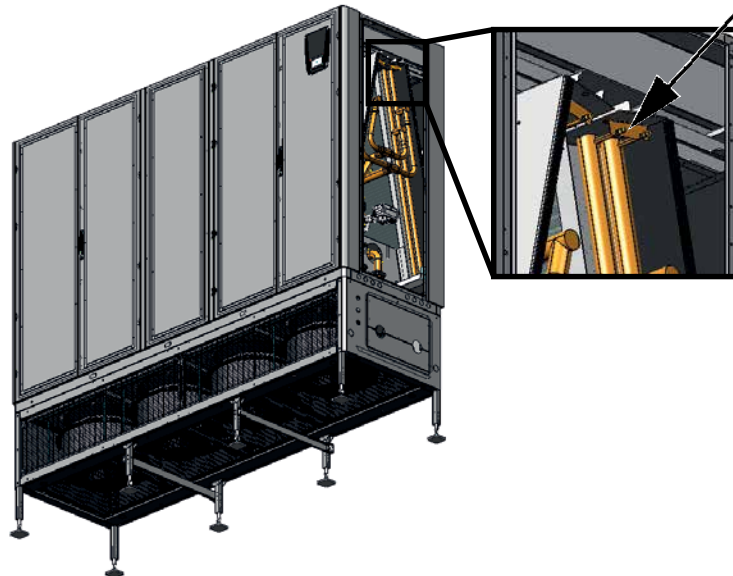

The relief valves are accessible in the units from front of the machines.

8.5 Fans inspection

» Fans inspection



- 1 Locate the lower front grate
- 2 Remove the grate
- 3 Remove the two horizontal supports of the fans
- 4 Use M8 screws, applied upwards, to lock the base module structure
- 5 Remove the fan's front cover

- 6 Open the doors of the unit and remove the buffers placed between the fans and batteries
- 7 Remove the two M8 screws that secure each fan and take out the fans


8.6 Set the right fan speed

The adopted fans are of the backward curved blades type in combination with a 4 poles e-motor.

This kind of fan has very high performances so that it's speed has to be reduced in order to match to the nominal air flow with the real external pressure drops.

In case of wrong selection, the air flow may exceed the limits with possible water dragging out from the coils.

In case of DX units a not sufficient airflow can cause ice on the coil.

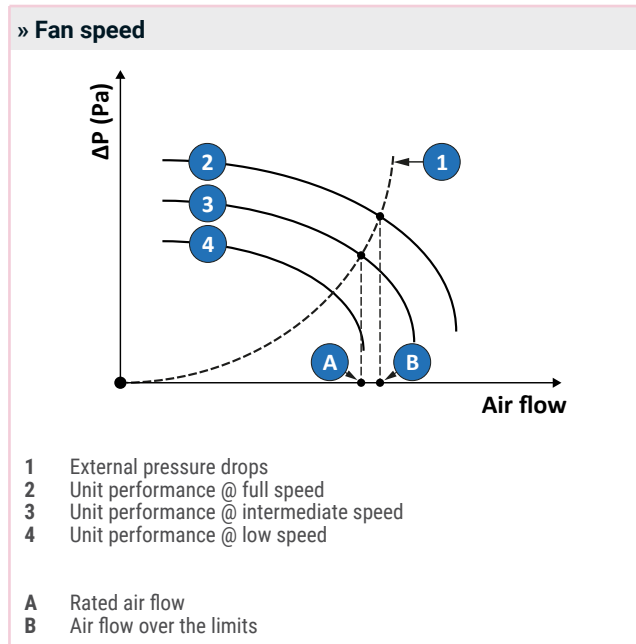

The fan speed has to be selected according to the enclosed table.

In the EC fans the rotation speeds are selected with different values of the control tension (0 - 10V).

If in the unit is present the ADVANCED control the right value of the control tension is set by the keyboard present in the advanced control.

With the BASIC control the control tension is set with a manual potential installed in the E-Panel.

To know the tension set with the potential it is necessary to use an external tool (Voltmeter).

9 TROUBLESHOOTING

For troubleshooting purposes, please refer to the list and to the complete description of the alarms related to the installed software version.

ATTENTION

Do not reset the alarm until after an accurate analysis and subsequent removal of the causes of the alarm.

DANGER

As far as possible remedies are concerned, it is first of all essential to have read the chapter “1.1 Scope of application p. 6” and the chapter “2.2 General precautions p. 12”, to be able to adopt all the necessary precautions.

WARNING

You should be extremely careful when attempting to implement any of the possible remedies suggested: overconfidence can result in injuries, even serious ones, to inexperienced individuals.

Below you will find a list of the most common reasons that may cause the package unit to fail or any malfunction. This causes are broken down according to easily identifiable symptoms.

ATTENTION

You should be extremely careful when attempting to implement any of the possible remedies suggested: overconfidence can result in injuries, even serious ones, to inexperienced individuals. Therefore, once the cause has been identified, you are advised to contact the manufacturer or a qualified technician for help.

FAULT	POSSIBLE CAUSES	CORRECTIVE ACTIONS
The unit does not start	No electrical power supply	Check its presence both on the primary and auxiliary circuit
	The circuit board is not powered.	Check the fuses
	There are alarms present	Check the microprocessor panel for the presence of alarms, eliminate their cause and restart the unit
	The phase sequence is wrong	Invert two phases in the primary power line after disconnecting them upstream from the unit.
Presence of air in the hydraulic circuit	Air inlet occurred during the connection of the unit to the hydraulic system	Open the valves located on the top of the coil.
Water out from the unit	The drain pan hole is closed	Open the front panels, remove the sheet metal just below the electric control board (down flow units) and clean it.
	The siphon is missing	Check and provide for a new one
	The air flow is too high	Reduce the fan speed up to reaching the nominal air flow.
	Condensate drain pan is not perfectly horizontal	Place correctly the unit.

10 RETIRING THE UNIT

When the unit has reached the end of its expected working life and therefore needs to be removed and replaced, a number of precautions must be followed:

- the structure and the various components, if not reusable, must be demolished and separated according to their product type: this is particularly relevant for copper and aluminium, which are present in fairly high amounts in the machine.

This should be done to facilitate work at the special collection, disposal and recycling centres and to minimise the environmental impact that this operation requires.

⚠ ATTENTION

If the unit, or part of it, has been decommissioned, any of its parts that are likely to cause dangers must be rendered harmless.

Please note that any replacement of unit parts subject to separate waste disposal must always be done by referring to the currently applicable legal provisions.

Please note that it is mandatory to record the loading and unloading of special and toxic-harmful waste.

Collection of special and toxic-harmful waste must be carried out by specially authorized companies.

Disposal of special and toxic or harmful waste must be carried out in compliance with the law provisions in force in the user's country.

For unit scrapping, follow the law prescriptions in force in the user's country. Before demolition ask the appointed organism to inspect the unit and write a report.

Finally, carry out scrapping according to the law in force in the country of use.

👉 WARNING

Dismantling, disposal and scrapping operations must be carried out by qualified personnel.

10.1 Waste electrical and electronic equipment management

This product falls within the application scope of the Directive 2012/19/EU concerning the management of waste electrical and electronic equipment (WEEE).

Equipment must not be disposed of with household waste as it is made of different materials that can be recycled at special facilities. Please inquire through your municipal authorities as to the location of the eco-friendly waste management sites where waste can be received for disposal and its subsequent recycling as recommended.

Furthermore, please note that, when an equivalent appliance is purchased, the seller is expected to collect free of charge the old product to be disposed of.


The product is not potentially dangerous for human health and the environment, as it does not contain any harmful substances according to the Directive 2011/65/EU (RoHS), but if disposed of freely in the environment, it might adversely affect the ecosystem.

Read the instructions carefully before using the equipment for the first time. It is strongly recommended not to use the product for any purpose other than that for which it was designed, to prevent the risk electric shock if the product is used incorrectly.

👉 WARNING

The crossed-out wheellie bin symbol on the equipment label indicates that the equipment is compliant with the Waste Electrical and Electronic Equipment (WEEE) Directive.

Disposing of the equipment freely in the environment or illegally disposing of the equipment are punishable by law.

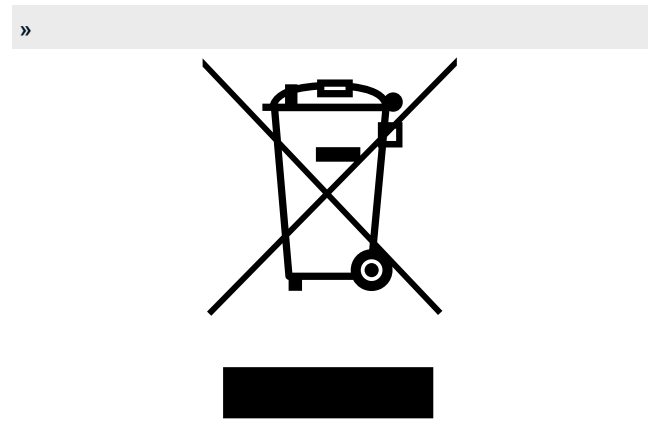



LGL FRANCE
6 Rue des Albatros – ZI Les Meurières – BP71
69780 Mions – FRANCIA
T. +33 (0) 472 232 020